





➤ Installation of boot using universal clamps



For professional installation with universal clamps use our tool as follows:

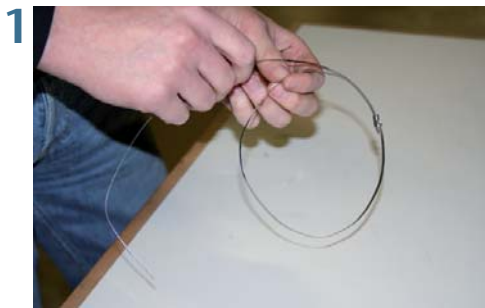

Adjust the clamp to fit the boot diameter.



Fit the clamp to the boot and adjust by hand. The number of turns is dependent on the diameter of the joint.




Guide the clamp into the tool.



IMPORTANT: Use the tool with the clamping lever positioned on the right hand side. The cutting lever must be underneath on the left. The cutting edge will only work in one direction!

Repair tip

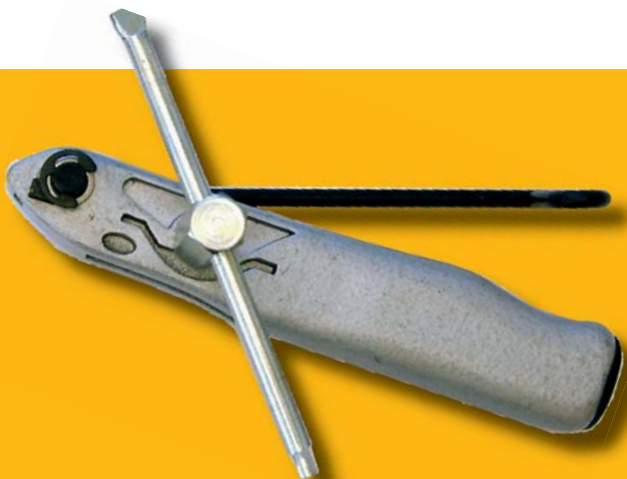

Mounting tool
Art. No. 190133



Universal clamps
Art. No. 190136

! ATTENTION: Always take care of your own safety and the safety of others. Please work safely and wear safety equipment. Injuries such as cutting or bruising are possible.



5



Thread the strap past the cutting blade into the indentation of the crank.

6



Turn the clamping lever until the tool touches the boot and the clamp is fitting tightly.

7



Once the rubber of the boot is compressed the clamp is tight enough.

8



Then bend the clamp back.

9



Flatten the clamp using a small hammer.

10



Turn the cutting lever to cut the clamp.

11



Press the safety clips tightly to the clamp using a small hammer.

12



Pull the clamping lever sideways to remove the excess clamp from the tool.

GKN Driveline Industrial & Distribution Services

Headquarters:
GKN Service International GmbH
Nussbaumweg 19-21
51503 Rösrath / Germany

www.gknservice.com

© GKN Driveline. All rights reserved.